


Installation Instruction

This module is setted to make the leaving home and coming home function work through front fog lamp, but if you want to make these function work through headlight, you can remove the jumper 3 as below.

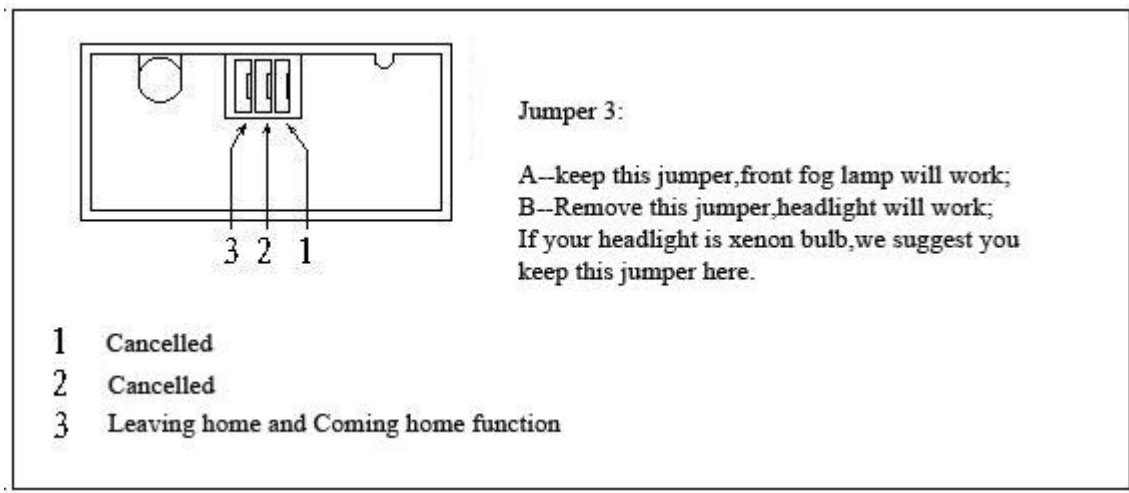

How to set the Memory Function: Plug the car key and move it to make the car get power

(A) **Side light:** If you want the side light works at a certain light intensity, please do as below at same light intensity:

AUTO→Side Light→**AUTO**, if you set it without mistake, the module will sound 2 times! And the side light will work at the same light intensity.

(B) **Headlight:** If you want the headlight works at a certain light intensity, please set it as below:

AUTO→Headlight→**AUTO**, if you set it without mistake, the module will sound 3 times. The headlight will start work automatically at the same light intensity when you set it;

(C) **Tunnel Model:** **AUTO**→**O**→**AUTO**, if the module sound one time, that means you open the tunnel model, if the module sound 2 times, that means you closed this model.

You need to remove the car key first to set below function:

(D) **How to set the working time of coming home function:**

Remove the key, do as below: **AUTO**→**0**→**AUTO**→**0**→**AUTO**, the module will sound one time and the side light will start flashing, and the module will start to countdown, for example, if you want the coming home function keeps works 20 seconds, you move the switch to **HEADLIGHT** position 20 seconds later after the side light start flash, the module will sound one time, that means you succeed set it; Please do not set the working time less than 5 seconds, that is invalid.

Remark:

1. Tunnel Model:

Tunnel model is most sensitive, for example if your car is passing footbridge or the shade, headlight will start work at once