


Inštalácia Highline Back up cam. Superb/Octavia 3

1. Zapojenie:

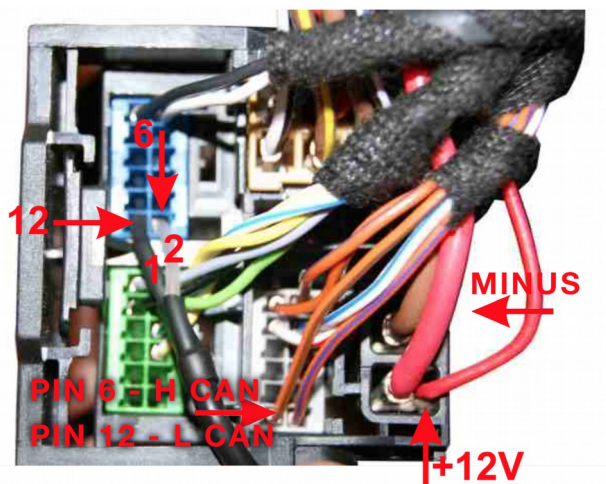

2. triska zapojenie:

Ysilon: 1J0 955 873D
Spojky: 5J0 955 871A
Rura: 1J0 955 751D



3. Kódovanie:

19 Gateway: Installation -> 6C zaskrtnut -> Save

10 Park Assist: Long Coding -> Byte2 > Bit 4-5 - **10 Camera Type: Rear View Camera (RVC) installed**

5F Information electr.: -> Security code: 20103 -> adaption ->

Car_Function_List_BAP_Gen2-VPS_0x0B

activated

Car_Function_List_BAP_Gen2-VPS_0x0B_msg_bus

Databus Infotainment

6C (Manual tr.) >

long coding:

0484020102002017000040

6C (DSG tr.) >

long coding:

04840201A2002017000040