

# Typ 2 861 22, 961 22

2 861 22 - Škoda Karoq 2017 →  
961 22 - Škoda Kodiaq 2016 →



ca ...30 min.

Milotec®


Auspuff-Dummy • Dummy - koncovky výfuku • Dummy exhaust • faux échappement

## Montageanleitung • Montážní návod • Fitting instructions • Instructions de montage


Technische Änderungen vorbehalten • Technická změna vyhrazena • Subject to technical alterations • Sous réserves de modifications techniques

Lieferumfang • Obsah balení • The pack contains • Fournitures:

Ⓐ 1 x L

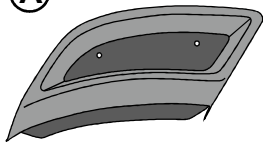

1 x R

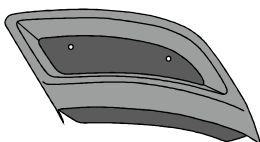

Ⓑ 4 x

4,1 x 16



Ⓒ 1 x

Montageanleitung  
Montážní návod  
Fitting instructions  
Instructions de montage

Gerät • Nářadí • Tools • Outils

TORX 20

Ø 2,5 mm

