

Typ 3 688 04, 3 688 22

Škoda Octavia III. Limousine 02/13 →
Škoda Octavia III. Combi 05/13 →



ca ...30 min.

Milotec®


Auspuff-Dummy • Dummy - koncovky výfuku • Dummy exhaust • faux échappement

Montageanleitung • Montážní návod • Fitting instructions • Instructions de montage


Technische Änderungen vorbehalten • Technická změna vyhrazena • Subject to technical alterations • Sous réserves de modifications techniques

Lieferumfang • Obsah balení • The pack contains • Fournitures:


A 1 x L

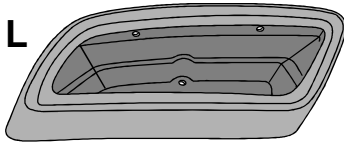

1 x R

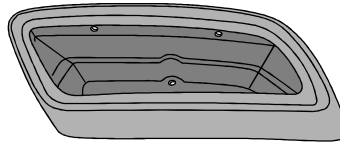


B 6 x




C 1 x

Montageanleitung
Montážní návod
Fitting instructions
Instructions de montage

Werkzeug • Nářadí • Tools • Outils

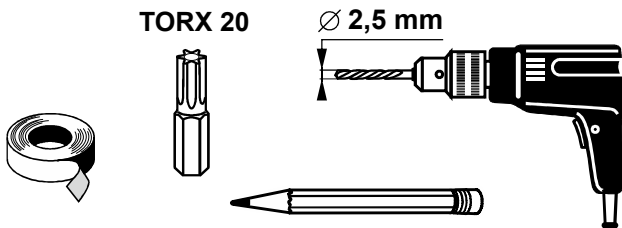


1. R + L

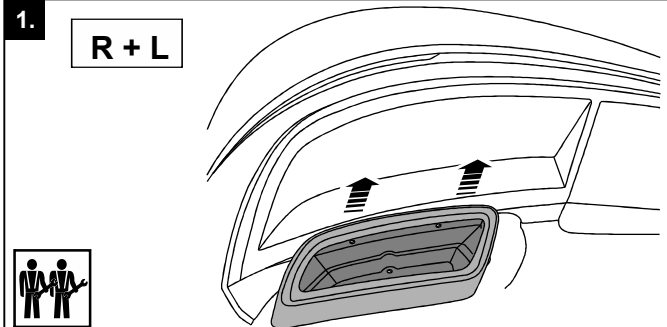


2. R + L

3. R + L

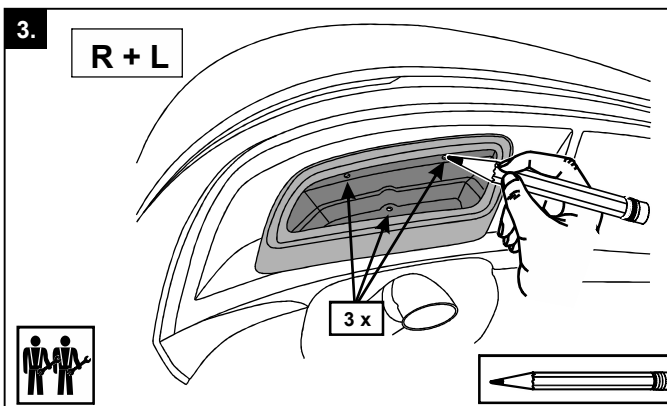

4. R + L

5. R + L

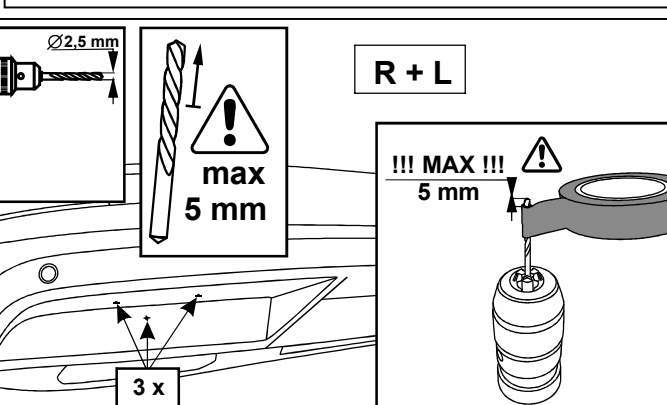

6. R + L

7.

